


6.9.3 Importing grinding material

Copying of datasets from an external data storage medium.

- ▼ Call up the *Service* menu.

	<p><b>Local target directory of the data storage medium</b>                  ArvisEB/Data/Recipes/Abrasives/ <b>Grinding material file</b></p>
---	--

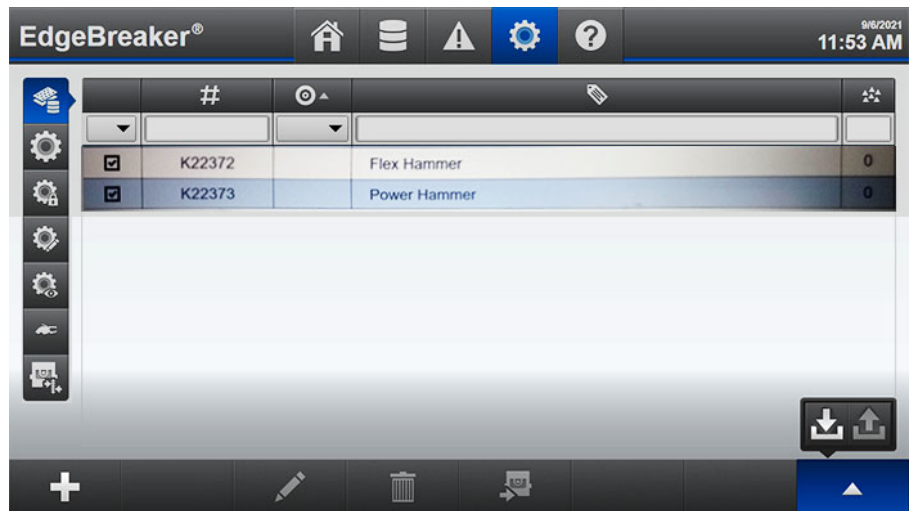



Fig. 6-36: Service – Grinding material, importing

Symbol	Designation
▲	<i>Data exchange</i> Importing datasets (grinding material) from an external data storage medium.
▼	<i>Import</i> Copying datasets from an external data storage medium.

Importing/exporting data

- ▼ Attach a data storage medium (e.g. USB stick) to the USB socket.
  - ↳ Local target directory must be created.
- ▼ Touch the *GRINDING MATERIAL* button.
- ▼ Call up the *DATA EXCHANGE* function.
- ▼ Touch the *IMPORT* button.
  - ↳ Follow the instructions on the touch screen.

	<p>If the grinding material of the recorded <i>Grinding material list</i> is available, it will be overwritten.                  Request to overwrite must be confirmed!</p>
---	--